

Espresso HD Computer Removal Guide

Remove the left and right clam shell parts at the front of the bike.

3 Philips screws on both sides hold the shells to the computer housing (the chassis).

5 Hex screws (3 mm) hold the clam shell parts to each other.


At this point, it's a good idea to take pictures of the wires inside to remember which one goes where.



Center screw on both sides holds the chassis to the frame.




Rock the chassis and MRD tray forward to clear the shell above.
The unit now is only attached by the wires.

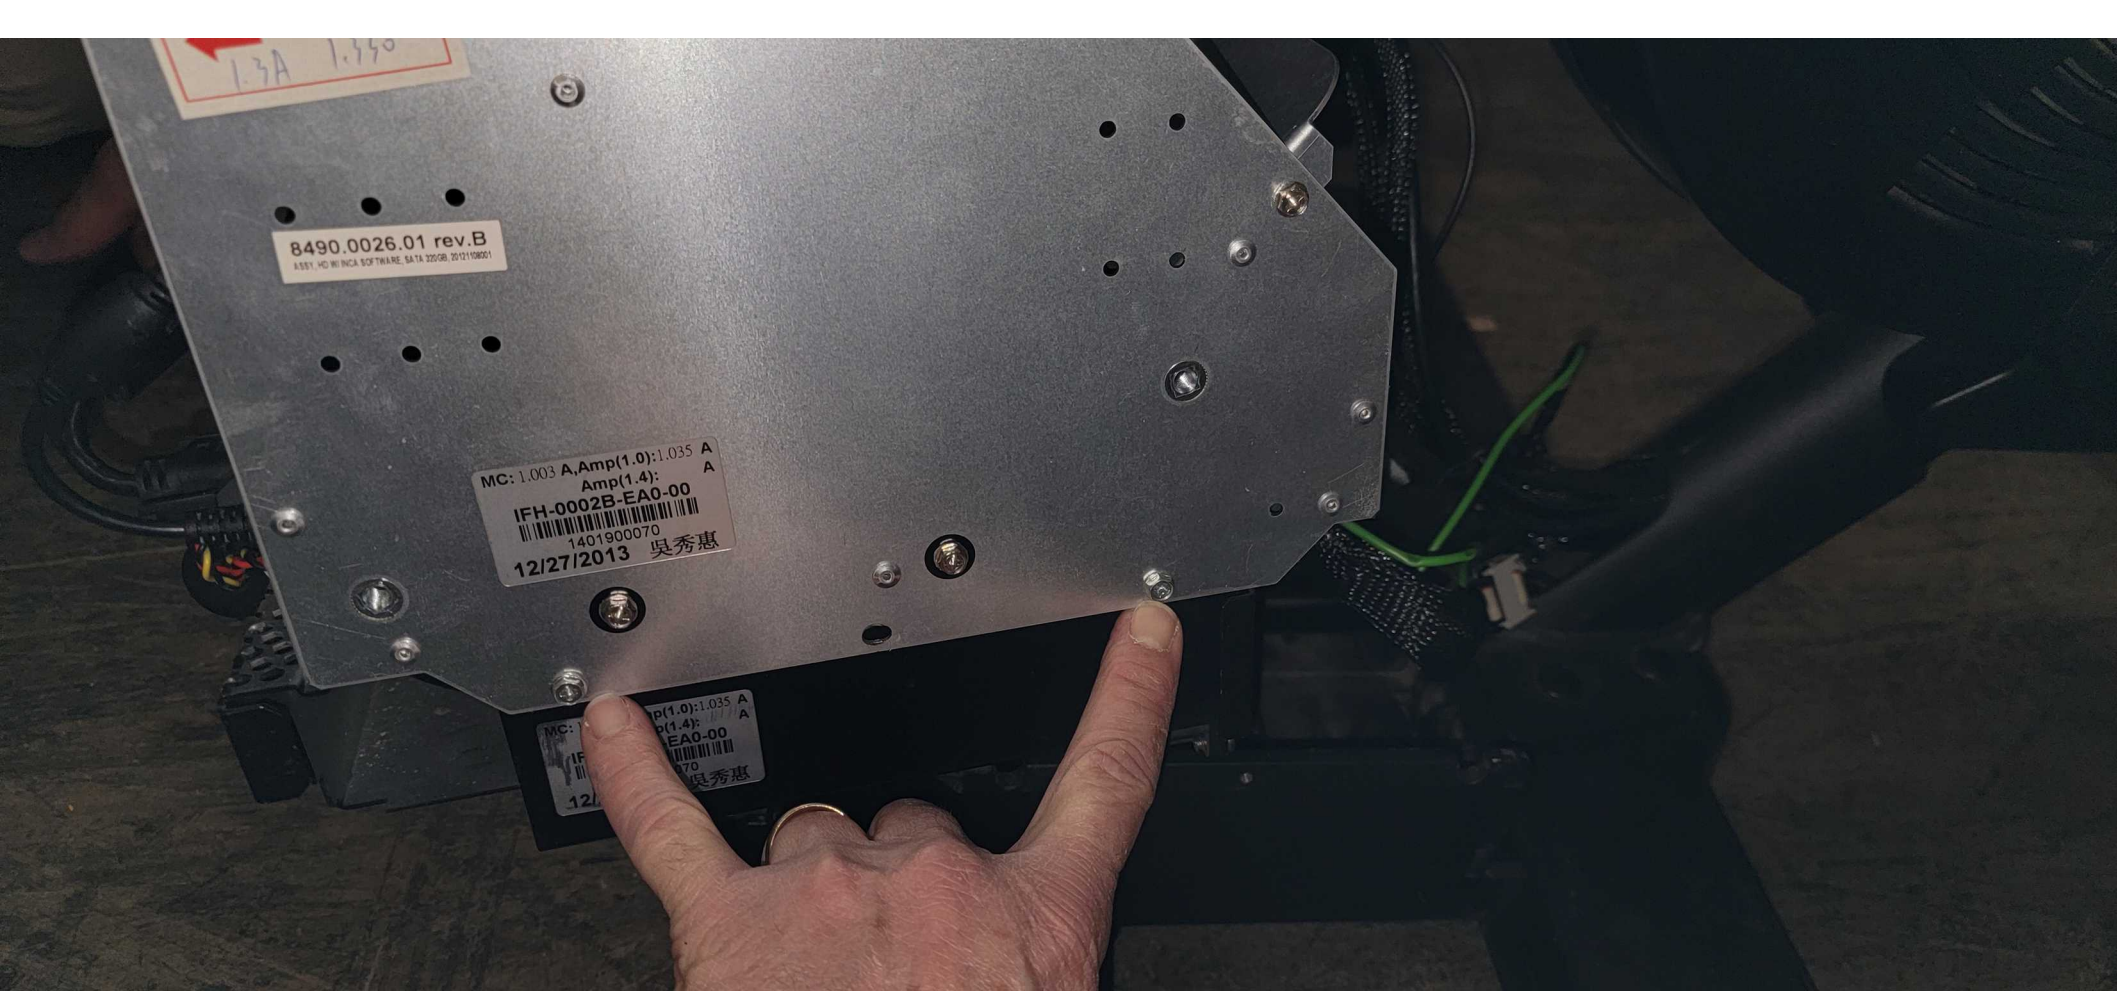




These 2 screws on both sides attach the chassis to the MRD tray.

Don't remove them.

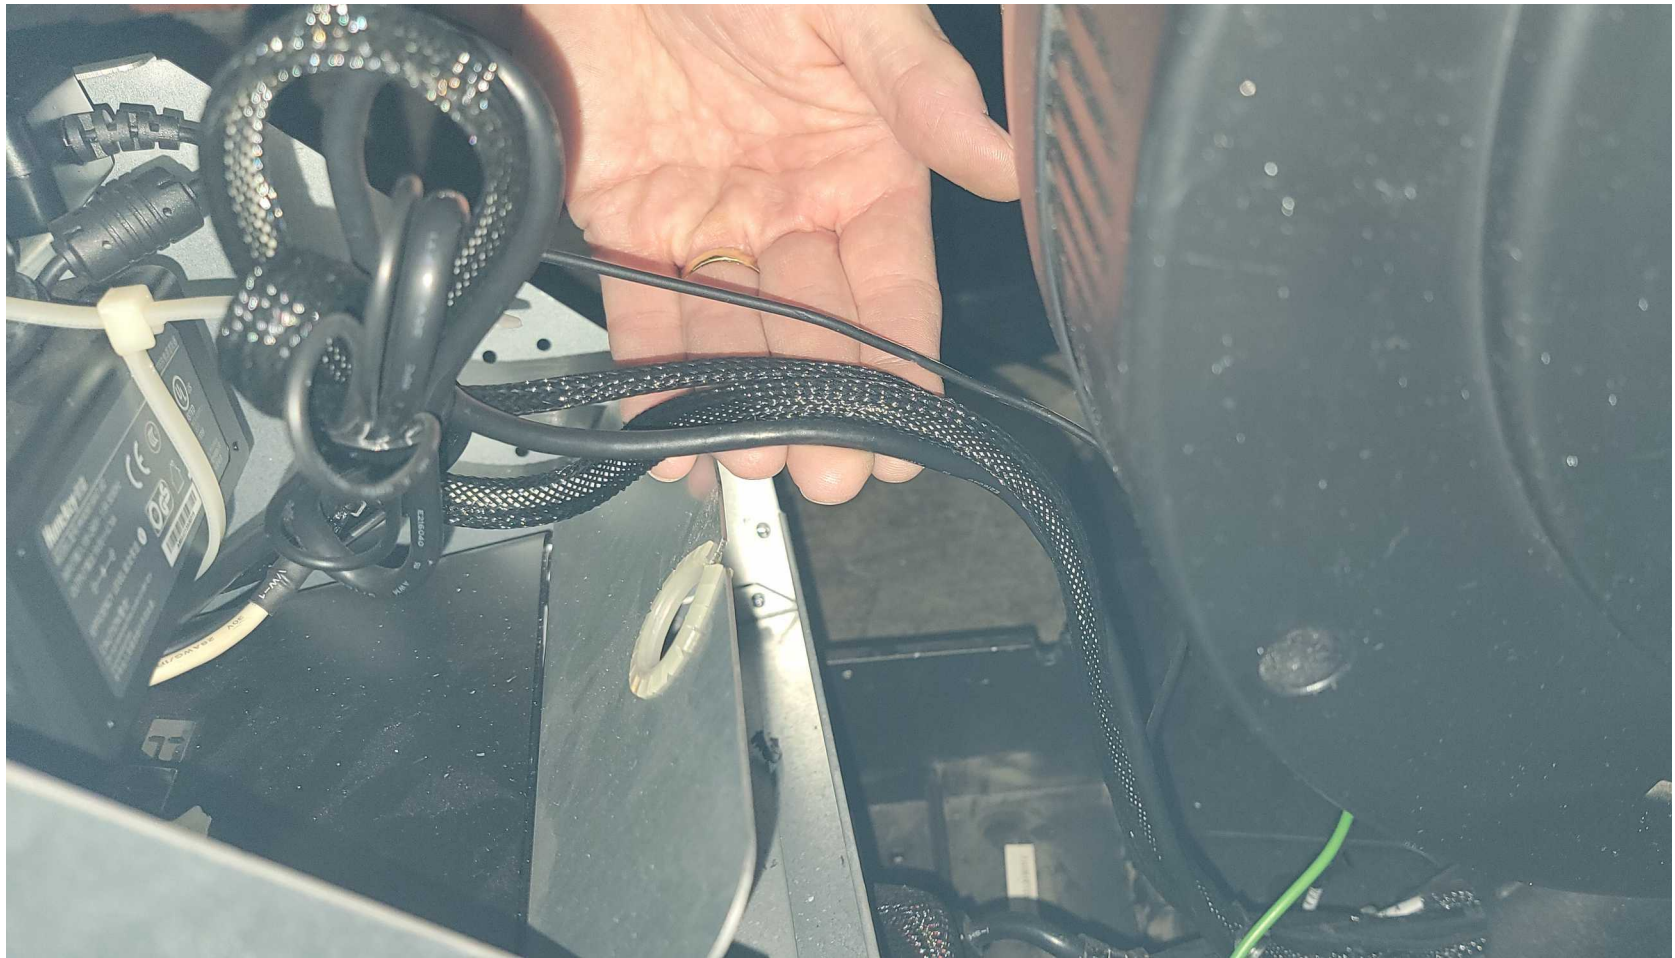


These wires will stay with the bike.

Disconnect these from
the back of the
computer

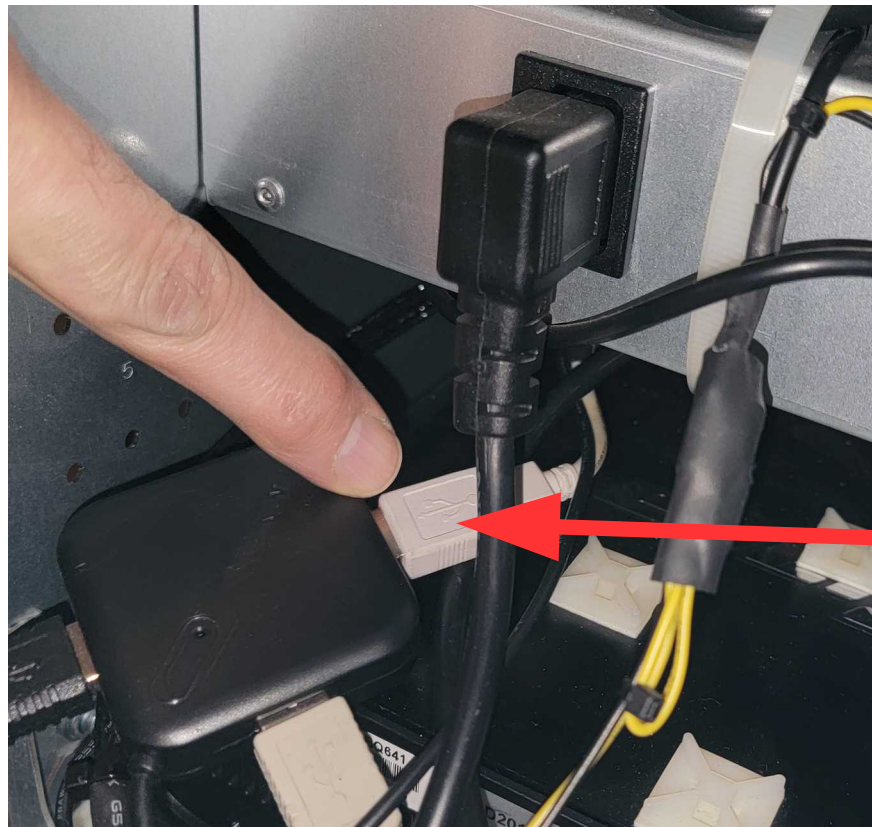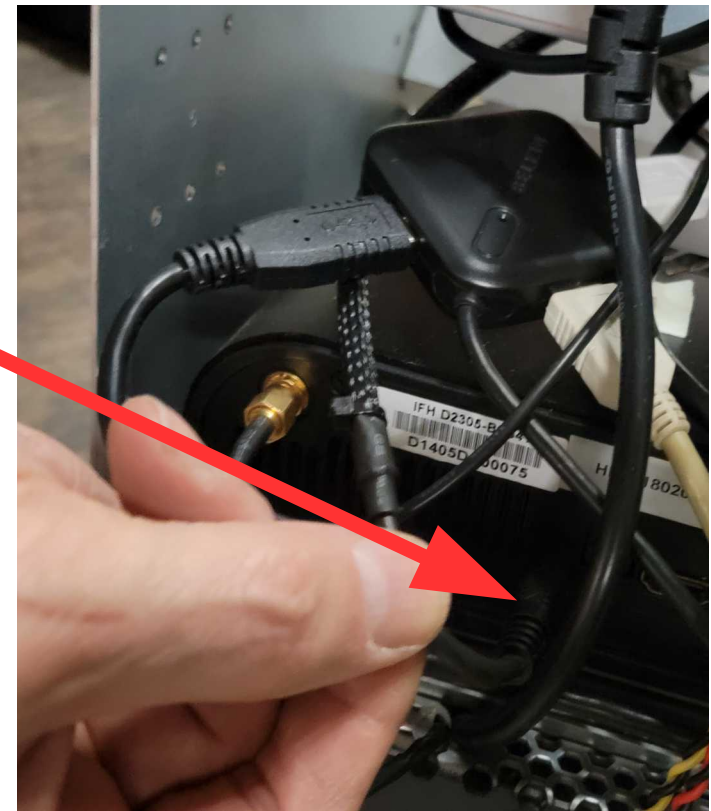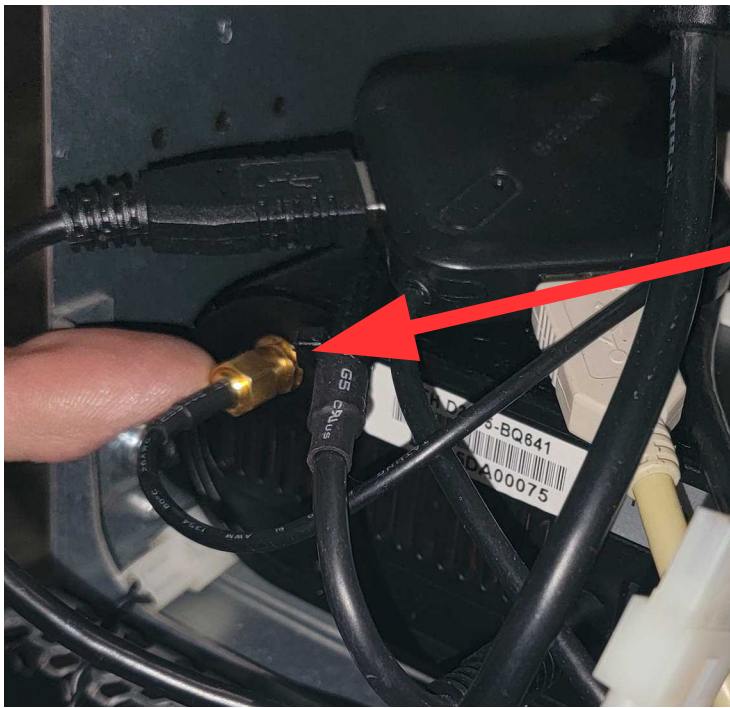

Disconnect the USB cable from the hub.

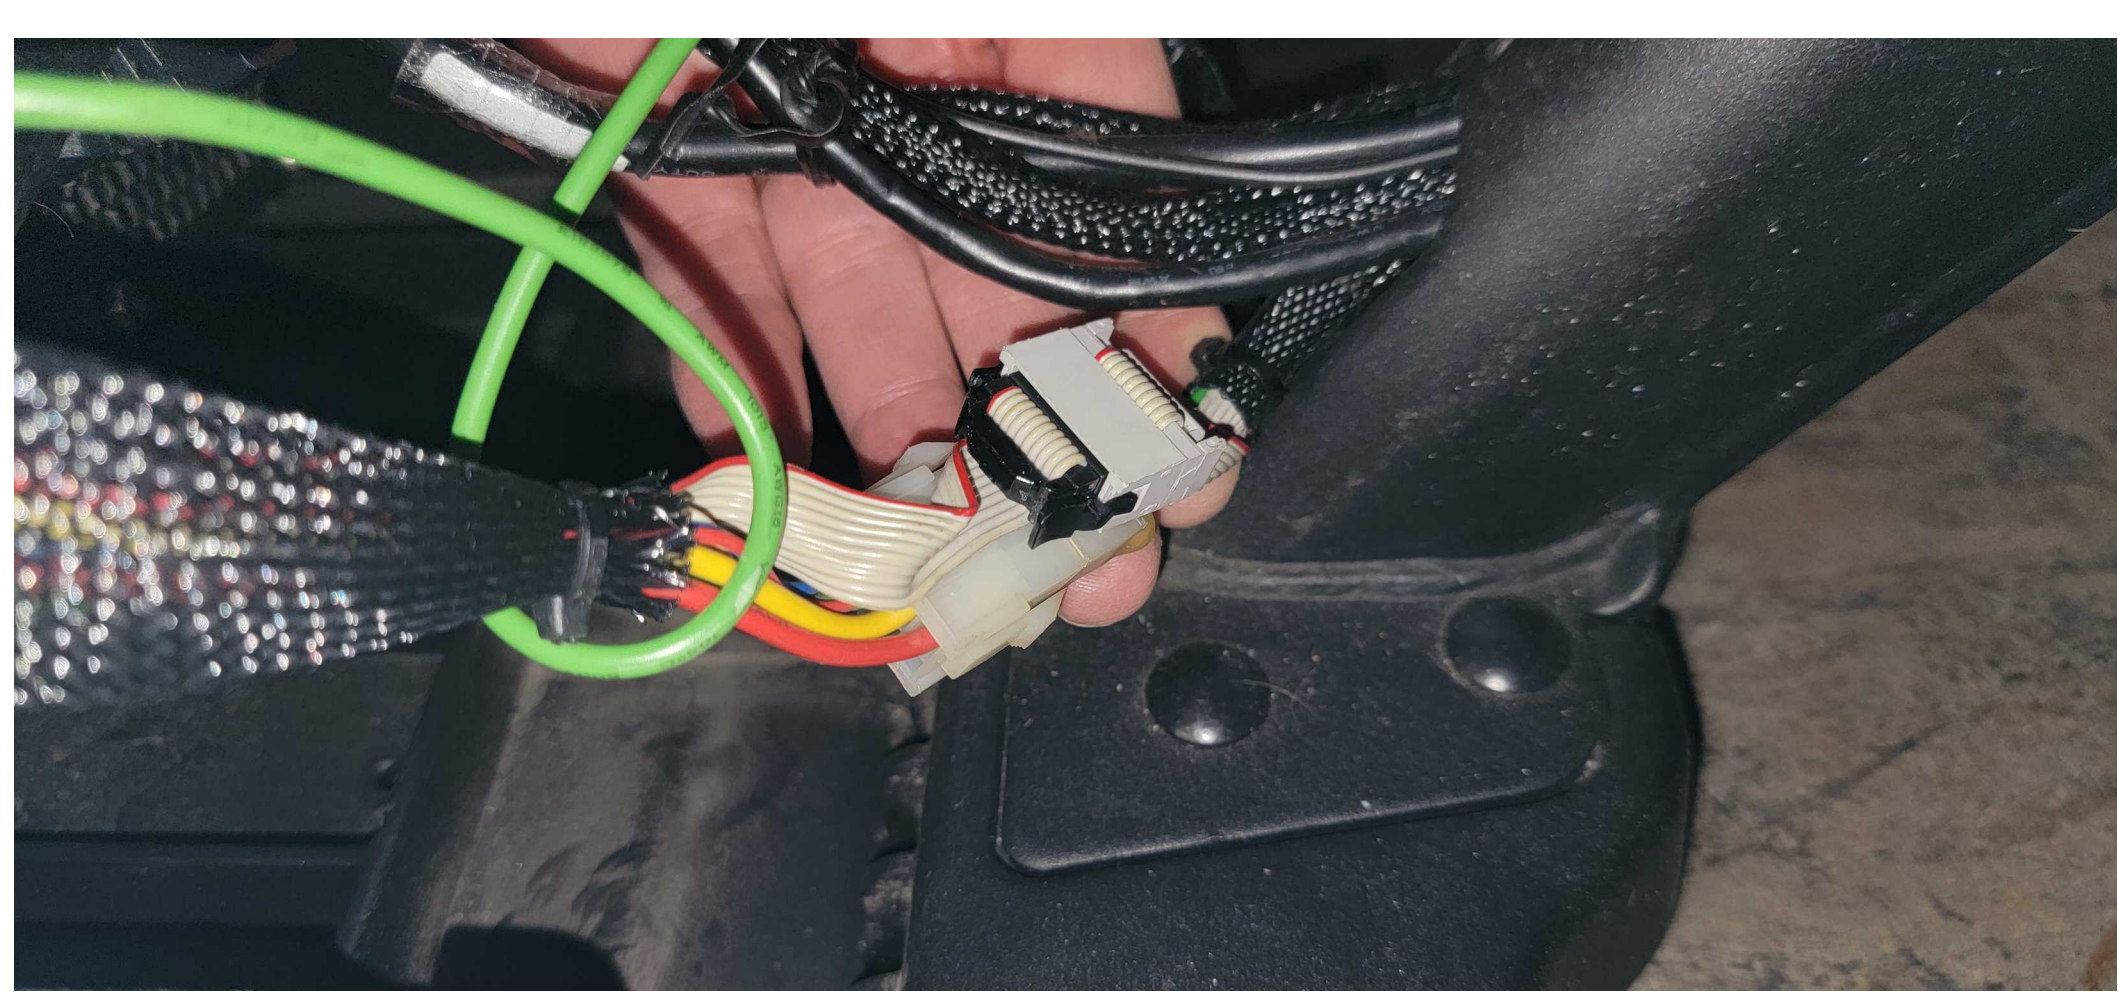

Disconnect the 2 connectors from the MRD tray to the MRD.
Unscrew the green ground wire from the frame.

The unit is now free of the bike and ready to be shipped.